

# VaporBright Crawl Space

## Installation Guide



**Supplies Needed:** VaporBright liner, VaporBright white tape, VaporBright butyl tape, VaporBright fasteners, BaseShield drainage dimple mat, tape measure, utility knife, masonry drill and bit.



**Step 1:** Begin by measuring the wall height and add 12 inches. This will be the length of the VaporBright liner to cut from the roll.



**Step 2:** Apply double sided VaporBright butyl tape at the top of the wall to adhere the VaporBright liner leaving the protective wrap in place.



**Step 3:** Drill holes through the butyl tape into the concrete at 3-foot centers for placement of the fasteners.

# VaporBright Crawl Space

## Installation Guide



**Step 4:** Remove the protective wrap from butyl tape and apply the VaporBright liner over top of the butyl tape. VaporBright liner will cover the wall and extend 12 inches across the floor.



**Step 5:** Install the VaporBright nylon expansion fasteners into the pre-drilled holes to secure the VaporBright liner.




**Step 6:** Apply the white pressure sensitive VaporBright tape along the seams between liners to secure together and create a finished gas-tight seal.




**Step 7 (Optional):** Install the BaseShield Dimple Drainage mat dimples side down over the gravel and dirt floor. The matting provides a durable subfloor beneath the VaporBright liner and aids in drainage.

# VaporBright Crawl Space

## Installation Guide

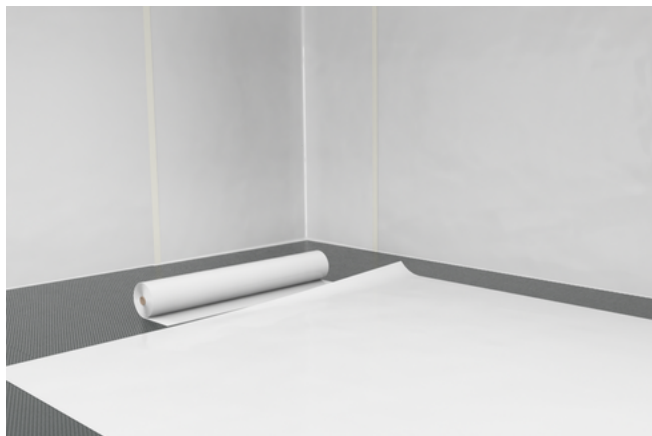

**Step 8:** Install the VaporBright liner across the crawl space floor. Measure the length needed.

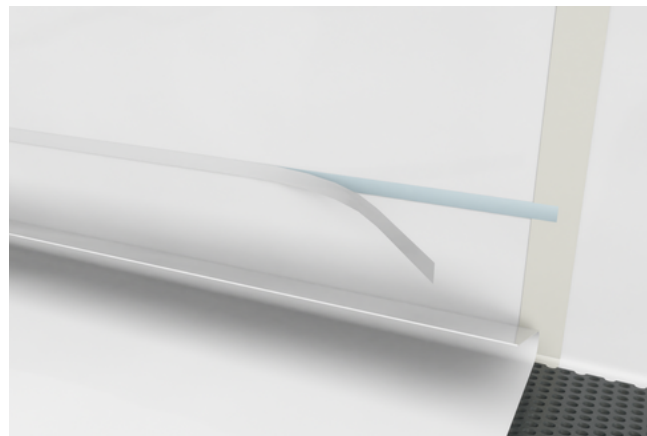

**Step 9:** Apply double sided butyl tape 12 inches above the floor. Aligned with top edge of VaporBright liner and secure to butyl tape.



**Step 10:** Apply the white pressure sensitive VaporBright tape along the seams between liners to secure together and create a finished gas-tight seal.



**Step 11:** The result is a bright white, fully encapsulated and waterproofed crawlspace.